



<u>نحوه ورود به کنسول مودم</u>

<u>تنظيمات اينترنت</u>

فعال کردن Annex m

<u>نحوه ی خاموش کردن WPS مودم</u>

<u>تنظیمات وایرلس</u>

<u>نحوه راه اندازی acs روی مودم</u>

<u>فعالسازیACL مودم</u>

<u>مشاهده پارامتر</u>

<u>تنظيمات PORT FORWARD</u>

نحوه ورود به کنسول مودم :

آیپی دیفالت ورود به تنظیمات این مودم **192.168.1.1** است.

برای وارد شـدن به کنسـول مودم یک صفحه در مرورگر Internet Explorer یا Firefox و یا Chrome باز کرده و در قسـمت Address Bar آن،1.1/188.1 را وارد کنید و سـرچ کنید.

نام کاربری این مودم admin و رمز عبور آن شامل حرف و عددی است که در کف مودم بر روی برچسب آن درج شـده ,است. بعد از وارد کردن نام کاربری و رمز عبور روی Login کلیک کنید.

Product Page: DSL-224 Firmwa	are Version: ME_1.10
D-Link	
LOGIN Input username and password	
Username : admin ✓ Password : رمز درج شده روی برچسب مودم login	
BROADBAND	

در قسمت Internet setup روی Channel Config کلیک کرده و مطابق تصویر ذیل موارد را بررسای فرمایید

D-Link

D5L-224	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP			
Wizard	SETTING UP YO	SETTING UP YOUR INTERNET						
Local Network	There are two ways t	to set up your Internet conn	ection. You can use the Wel	b-based Internet	First time users are recommended to run the			
Internet Setup	Channel Config	Setup Wizard. Click the						
Wireless Setup	ATM Settings	u have your ISP's connectior	n settings first if you choose	manual setup.	and you will be guided			
Time and Date	ADSL Settings	IECTION WIZARD			process of setting up			
	Note: Before launch the Quick Installation	PVC Auto Search Too can use uns wizard for assistance and quick connection of your new D-Link Router to the Internet. You will be presented with step-by-step instructions in order to get your Internet connection up and running. Click the button below to begin. Setup Wizard Note: Before launching the wizard, please ensure you have correctly followed the steps outlined in the Quick Installation Guide included with the router.						

(نکته: در صورتی که سـرویس شـما ADSL می باشـد گزینه Chanel type روی ATM و در صورتی که سـرویس شـما VDSL می باشـد PTM قرار دهید)

						-
D-Lin	k					
DSL-224	SETUP		ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	CHANNEL CO	NFIGURAT	ION			Helpful Hints
Local Network Internet Setup Wireless Setup	This page is use Modem/Router. "Disconnect" bu	d to configure Note : When tton will be en	e the parameters for connect type of PPP nable.	the channel operation m oE and PPPoA only is "Ma	odes of your ADSL anual", the "Connect" and	When configuring the router to access the Internet, be sure to choose the correct from
Time and Date	WAN PHYSIC	CAL TYPE				the list below.
	WAN	I Physical Ty	rpe: 🖲 DSL WAN 🤇	C Ethernet WAN		Please take care when entering your and as these are case sensitive. The
	DEFAULT RO	UTE SELEC	TION			majority of connection issues are caused by
	Default R	oute Selecti	ion: 💿 Auto 🔿 :	Specified		incorrect users are or
						combinations.
	CHANNEL CO	ONFIGURAT				the router for the new
	Channel Type:			Formanda Marci 🔍 11	0.000	effect.
	Channel Mode	PPPoE	<u> </u>	Enable NAPT: C	able IGMP: 🗆	More
	VLAN: O Disa	ble O Enab	le	VLAN ID(1-4095):		
	IP Protocol:	Ipv4	~			
	PPP Settings:	User Name	شناسه کاربری :	Password:	رمز PPPOE	
		Туре:	Continuous	V Idle Time (min):		
	WAN IP Settings:	Type:	Fixed IP/IP Unnumbered	O DHCP		
		Local IP Address:		Remote IP Address:		
		Netmask:				
	Default Route:	O Disable	Enable	Auto		
	Unnumbered					
		.				
	Connect Disc	onnect Ad	d Modify Del	ete Undo Refresh		

WAN PHYSIC	AL TYPE			
WAN	I Physical Typ	De: 💿 DSL WAN 🔿 Ethe	rnet WAN	
DEFAULT BO	ITE SELECT	TON		
Default R	oute Selectio	non 🔍 Auto 🔾 Specifie	4	
Default N	oute selection			
CHANNEL CO	NFIGURATI	DN		
Channel Type:	PTM v			
Channel Mode	: PPPoE	 Enable NA 	PT: 🗹 🛛 Enable	e IGMP: 🗌
Vlan Auto Det	ect: 🗌		4005)	
VLAN: O Disad	bie () Enabi	e VLAN ID(1	-4095):	
IP Protocol:	Ipv4	- ~		
PPP Settings:	User Name:	شناسه کاربری	Password:	رمز pppoe
	Туре:	Continuous 🗸	Idle Time (min):	
WAN IP Settings:	Туре:	Fixed IP/IP Unnumbered	O DHCP	
	Local IP Address:		Remote IP Address:	
	Netmask:			
Default Route:	 Disable 	 Enable 	Auto	
Unnumbered				

فعال کردن Annex m

در قسمت Internet setup روی Adsl settings کلیک کرده و صفحه تنظیمات باز میشود تیک annex m فعال و apply change را بزنید

Product Page: DSL-224				Firmware Versio	on: ME_1.10 Logout
D-Lin1	ĸ				
D5L-224	SETUP	DVANCED	MAINTENANCE	STATUS	HELP
Wizard	ADSL SETTINGS				Helpful Hints
Local Network	Add Settings				Do not change these settings unless directed
Internet Setup	Ausi Settings.				by your ISP.
Wireless Setup	ADSL SETTINGS				More
Time and Date	ADSL modulatio	n:			
		G.Lite			
		G.Dmt			
		ADSI 2			
		ADSL2+			
		VDSL2			
	AnnexL Optio	n:			
		Enabled			
	AnnexM Optio	n:			
	VDCI 2 Drofil	Enabled	~		
	VUSL2 PION	e. 🔽 sa			
		✓ 88			
		sc			
		SD SD			
		🗹 12A			
		12B			
		17A			
	ADSL Canabilit	30A			
	AUSE Capabilit	Bitswap Fr	nable		
		SRA Enabl	e		
	Apply Changes				

تنظيمات وايرلس

ابتدا ُگزینهک setup را انتخاب میکنیم. سپس از گزینههای سمت چپ، گزینهی wireless ۲٫۴ را انتخاب و برای تغییر نام وایرلس، زیر منوی Basic را انتخاب میکنیم و در قسمت SSID نام وایرلس را تغییر میدهیم.

Product Page: DSL-224	Firmware Versio	on: ME_1.10 Logout
D-Lin	k	
DSL-224	SETUP ADVANCED MAINTENANCE STATUS	HELP
Wizard	SETTING UP YOUR INTERNET	Helpful Hints
Local Network Internet Setup	There are two ways to set up your Internet connection. You can use the Web-based Internet Connection Setup Wizard or you can manually configure the connection.	First time users are recommended to run the Setup Wizard. Click the button
Wireless Setup	Wireless Basics u have your ISP's connection settings first if you choose manual setup.	and you will be guided step by step through the
Time and Date	Wireless Security	process of setting up your ADSL connection.
	Wireless GRE Fourcan use uns wizard for assistance and quick connection of your new D-Link Router to the Internet. You will be presented with step-by-step instructions in order to get your Internet connection up and running. Click the button below to begin. Setup Wizard Note: Before launching the wizard, please ensure you have correctly followed the steps outlined in the Quick Installation Guide included with the router.	If you consider yourself an advanced user or have configured a router before, click Setup- >Internet Setup to input all the settings manually. More

D-Link

D5L-224	SETUP ADVANCED MAINTENANCE STATUS	HELP
Wizard	WIRELESS BASIC SETTINGS	Helpful Hints
Local Network	This name is used to configure the narameters for wireless LAN clients which may connect to your	Changing your selections
Internet Setup	Access Point. Here you may change wireless encryption settings as well as wireless network	is the first step
Wireless Setup	parameters.	network. Change it to a
Time and Date	WIRELESS NETWORK SETTINGS	not contain any personal
	Disable Wireless LAN Interface Band: 2.4 GHz (N) ◄ Mode: AP ◄ SSID: تام دلخواه برای مودم Channel Number: 11 ◄ Current Channel: 11 Radio Power (Percent): 100% ◄ Associated Clients: Show Active Clients	For your wireless devices to connect to your router, you will need to manually enter the summer sector on each device. (Please take a note of your SSID and keep it to hand.) More
	WIRELESS OPTIONS	
	Channel Width: 20/40MHZ V Control Sideband: Upper V	
	Apply Changes	

در قسمت security نیز میتوانید مطابق تصویر رمز مودم را تغییر دهید.

D-Link

DSL-224	SETUP ADVANCED MAINTENANCE STAT	'US HELP			
Wizard	WIRELESS SECURITY SETTINGS	Helpful Hints			
Local Network	This page allows you setup the wireless security. Turp on WEP or WPA by using Encountion	If you enable Wirele			
Internet Setup	could prevent any unauthorized access to your wireless network.	write down the			
Wireless Setup		you have configured			
Time and Date	SSID TYPE: Root VAP0 VAP1 Encryption: WPA2(AES) WPA2(AES) WPA2(AES) Use 802.1x Authentication WEP 64bits WEP 128bits WPA Authentication Mode: Enterprise (RADIUS) Personal (Pre-Shared Key) Pre-Shared Key Format: Passphrase Image: Control of the selected of th				

نحوه ی خاموش کردن WPS مودم:

روی سربرگ Advanced کلیک کرده در سمت چپ در قسمت wireless advanced قسمت Wps کلیک کرده سپس طبق مراحل زیر Wps خاموش میشود.

D-Lin	k				
DSL-224	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	Wireless Advanced	D SETUP			
Access Control List	Access Control	to change the setting for	WPS (Wi-Fi Protected Setu	up). Using this feature cou	uld let vour wireless
Port Triggering	<u>wps</u>	cronize its setting and con	nect to the Access Point in	a minute without any ha	ssle.
Port Forwarding	MBSSID	SETTINGS			
DMZ Parent Control			Disable WPS	ک برداشته شود	تيك
Filtering Options		Self-PIN Number:		egenerate PIN	
POS Settings		PIN Configuration:	Start PIN		
DNS	Pust	Button Configuration:	Start PBC		
Dynamic DNS					
Network Tools			Apply Changes Reset		
Routing					
NAT		50			
system tools	CORRENT RET IN	ru			
	Authe WPA2-	ntication Mixed PSK	Encryption TKID+AES	K	ey
			THAT ' NEV		
	CLIENT PIN INFO	1			
		Client PIN Number:			

نحوه راه اندازی acs روی مودم:

روی سربرگ Network Tools کلیک کرده در سمت چپ در قسمت Network Tools روی Tr069 کلیک کرده سپس صفحه تنظیمات Acs باز میشود و مطابق تصویر زیر فعالسازی را انجام دهید.

URL: http://tr069-delsa.net:9675

Inform interval: 3600

Port:7548

D-Lift!	K				
D5L-224	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	TR-069 CONFIGUR	ATION			Helpful Hints
Access Control List	This page is used to co	onfigure the TR-069 CPE	Here you may change the	setting for the ACS's	Provides a means to
Port Triggering	parameters.	inigure the fittoos cr2.	nere you may change the	second for the Acs's	performance as well as
Port Forwarding	ACS CONFIGURATI	ON			parameters from WAN side.
DMZ					More
Parent Control		IIRI: http://tr069)-deka net-9675	ī	
Filtering Options	lle	er Name:	deba.mee.sor.b		
DOS Settings					
DNS	Periodic Inform	n Enable: 🔘 Disable 🧿	Enable		
Dynamic DNS	Periodic Inform	Interval: 3600	0	seconds	
Network Tools					
Routing	CONNECTION REQU	JEST			
NAT	Us	er Name:]	
system tools	P	assword:]	
		Path: /tr069]	
		Port: 7548 <]	
	DEBUG				
	ACS Certifica	ates CPE: 🧿 No 🔿 Ye	s		
	Show	Message: O Disable O	Enable		
	CPE Sends Skip M	GetKPC: O Disable () IReboot: O Disable ()	Enable		
		Delay: O Disable O	Enable		
	Auto-E	xecution: O Disable O xtension: O Disable O	Enable Enable		
	Apply Changes Rese	t			

فعالسازی ACL مودم:

برای فعالً کردن ACL مودم روی سربرگ Advance کلیک کرده در سمت چپ در قسمت Access Control Listروی Access Control List کلیک کرده و سپس وارد صفحه تنظیمات ACL میشویم .

ابتدا direction select روی wan قرار داده شود سـپس wan interface روی any گذاشـته شـود، تیک مربوط به web فعال شـده و سـپس بر روی گزینه add کلیک کنید.

Product Page: DSL-224				Firmware Vers	ion: ME_1.10 Logout
D-Lini	ĸ				
D5L-224	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Advanced Wireless	ACL CONFIGURATIO	DN			Helpful Hints
Access Control List	You can specify what ser	vices are accessable form	n LAN or WAN parts. Entri	ies in this ACL table are	You can enable/disable
Port Triggering	used to permit certain ty	pes of data packets from	your local network or Inte	rnet network to the	LAN or WAN.
Port Forwarding	managment.	access control can be in	apror in seconing or reserve	ang the Gateway	More
DMZ	ACL MODE				
Parent Control		N AGI Madas 🥥 N			
Filtering Options	WA	NACL Mode: 🔍 W NACL Mode: 🔍 W	hite List OBlack List		
DOS Settings		Ân	nhv		
DNS			PHY		
Dynamic DNS	ACL CONFIGURAT	ION DIRECTION			
Network Tools	Dire	ection Select: O LA	N 🔍 WAN		
Routing					
NAT	ACL SETTINGS				
system tools		WAN Setting: Interfa	ce	▼	
	Ser	vices Allowed:	•	<u> </u>	
			web		
			ssh		
			ftp tftp		
		2	ping		
		A	bb		
		_			
	CURRENT ACL TA	BLE			
	Select Directio	n IP Address/I	nterface Service	Port Action	
	U WAN	0.0.0.0	web	ou Delete	
	L				

مشاهده پارامتر:

روی قسمت stats کلیک کرده ، در قسمت upstream مقادیر آپلود و در قسمت down stream مقادیر دانلود قابل مشاهده هستند در قسمت snr margin down stream میزان snr دانلود قابل مشاهده است و در قسمت snr margin up stream میزان snr آپلود قابل مشاهده است

Product Page: DSL-224				Firmware Vers	ion: ME_1.10 Logout
D-Lini	¢				
D5L-224	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Device Info	ADSL CONFIGURA	TION			Helpful Hints
Wireless Clients	This page shows the s	etting of the ADSL Router.			Displays ADSL setting.
ADSL Driver	ADSL				
Route Info	Adsl	Line Status	SHOW	TIME.	
Kodle Bilo	Ad	sl Mode	G99	2.5	
	Channel Mode		Interleave		
	Up	Stream	574 kbps		
	Dow	n Stream	8191 kbps		
	Attenuatio	n Down Stream	1	3	
	Attenuat	ion Up Stream	12		
	SNR Margi	in Down Stream	30.1		
	SNR Mar	gin Up Stream	23.6		
	Ve	ndor ID	RETK		
	Firmw	are Version	v136h720		
	CR	C Errors	0)	
	Up St	tream BER	0e	-7	
	Down	Stream BER	0e	-7	
	Up Ou	tput Power	-1	2	
	Down C	utput Power	1	2	
		ES	()	
		SES	0)	
		UAS	10	9	
		Retrain	Refresh		
BROADBAND					

تنظيمات PORT FORWARD تنظيمات

روی سربرگ Advanced کلیک کرده در سمت چپ در قسمت Port forwarding میتوان تنظیمات پورت فوروادینگ را انجام داد. مطابق تصویر میتوان اسم پورت فوروارد پروتکل-پورت ها و اینترفیس آن را مشخص کرد.در قسمت wan و lan port عدد مربوط به port مورد نظر و در قسمت lan ip address میتوان ip که میخواهیم port را روی آن forward کنیم قرار دهیم و در نهایت روی add کلیک شود.

Product Page: DSL-224	Firmware	Version: ME_1.10 Logout
D-Link		
D5L-224	SETUP ADVANCED MAINTENANCE STATUS	HELP
Advanced Wireless	PORT FORWARDING	Helpful Hints
Access Control List	Port Ennwarding allows you to direct incoming traffic from the WAN side (identified by Protocol and	Check the Usual Service
Port Triggering	WAN port) to the internal server with a private IP address on the LAN side.	for a list of predefined applications.
Port Forwarding	packets for this service to the specified server.	If you do not see your
DMZ		application listed you can still define a new
Parent Control	PORT FORWARDING SETUP	service.
Filtering Options	Usual Service Name AUTH	More
DOS Settings	User-defined Service	
DNS	Protocol TCP	
Dynamic DNS	WAN Setting Interface	
Network Tools	WAN Interface pppoe1	
Routing	WAN Port 113 (ex. 5001:5010)	
NAT	LAN Open Port 113	
system tools	LAN Setting Ip Address	
	LAN IP Address	
	Add Modify	
	CURRENT PORT FORWARDING TABLE	
	Select ServerN ame Protocol Local IP Local Po WAN IP WAN Por Address rt Address t State Action	n
BROADBAND		