



# راهنمای تنظیمات مودم Huawei Smart AX MT882a



راهنمای تنظیمات مودم Huawei Smart AX MT882a

تاریخ تنظیم: آبان ماه ۱۳۹۵

گروه شرکت‌های شاتل

فهرست مطالب

ورود به کنسول مودم

کانفیگ مودم

### ورود به کنسول مودم:


IP این مودم به صورت پیش فرض 192.168.1.1 است. برای وارد شدن به کنسول مودم یک صفحه مرورگر (Internet Explorer یا Firefox یا ...) باز کرده و در قسمت Address Bar آن، 192.168.1.1 را وارد کنید.



شکل ۱

### کانفیگ مودم:

وارد بخش Basic شده و بر روی WAN Setting کلیک کنید.

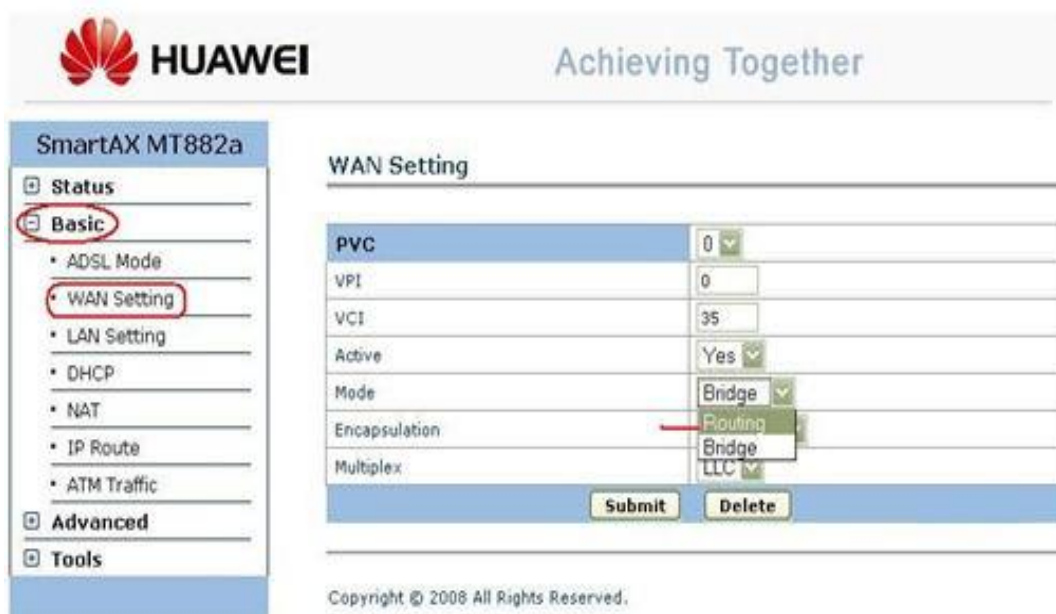


شکل ۲

تنظیمات را مطابق شکل بالا انجام دهید.

VPI=0

VCI=35

Mode= Routing

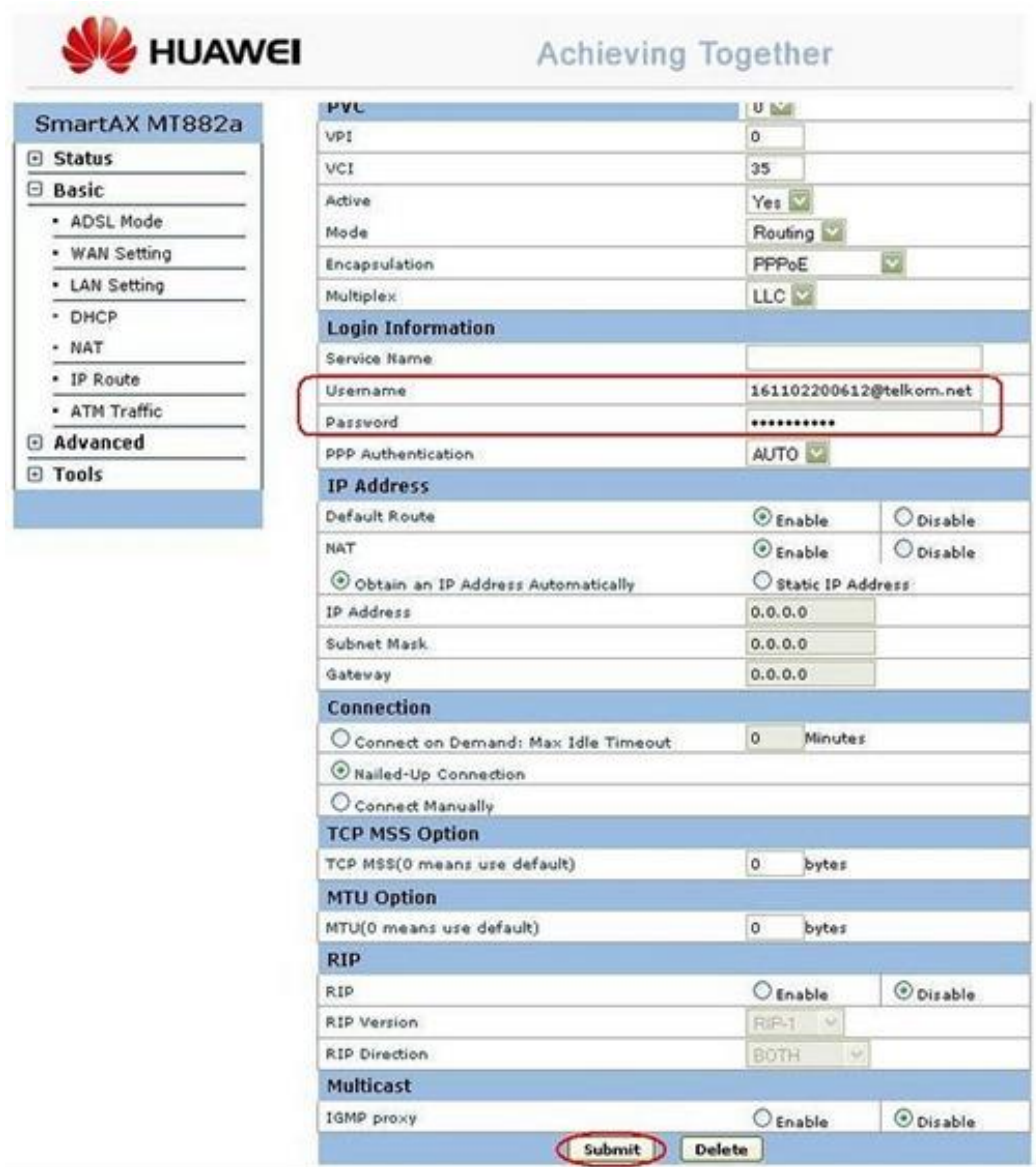

The screenshot shows the configuration page for a Huawei SmartAX MT882a modem. The interface is titled 'Achieving Together' and features a sidebar with navigation options: Status, Basic (ADSL Mode, WAN Setting, LAN Setting, DHCP, NAT, IP Route, ATM Traffic), Advanced, and Tools. The main configuration area is divided into several sections:

- PVC:** VPI is set to 0, VCI to 35, Active is Yes, Mode is Routing, Encapsulation is PPPoE, and Multiplex is LLC.
- Login Information:** This section is highlighted with a red box. It contains fields for Service Name, Username (161102200612@telkom.net), and Password (masked with asterisks). The Username field is also circled in red.
- IP Address:** Default Route, NAT, and Obtain an IP Address Automatically are all enabled.
- Connection:** Nailed-Up Connection is selected.
- TCP MSS Option:** TCP MSS is set to 0 bytes.
- MTU Option:** MTU is set to 0 bytes.
- RIP:** RIP is disabled.
- Multicast:** IGMP proxy is disabled.

At the bottom of the page, there are 'Submit' and 'Delete' buttons. The 'Submit' button is circled in red.

شکل ۳

در بخش Login Information نام کاربری و کلمه عبور خود را وارد کنید و در انتها بر روی دکمه Submit در انتهای صفحه کلیک نمایید.